

Advanced Settings Using Web/Telnet

This chapter explains how to configure advanced settings using Web browser/Telnet.



- The screen for Web/Telnet may vary depending on each product.

Note

1 Configure using a Web browser	2
Display the Web page of this product	2
Configure from the Web page of this product	3
- Network configuration	3
- Restart	4
- Factory default settings	4
2 Configure using the Telnet	5
Display configuration items of this product.....	5
Configure this product	6
- Enter a configuration value	6
- Finish the configuration	7

1 Configure using a Web browser

Since the HTTP protocol is loaded on this product, advanced settings for this product can be configured or changed using a Web browser. Useful functions including remote restart of the product and printer status monitor will be available.



- To use a Web browser, the TCP/IP settings need to be enabled, and an IP address needs to be configured.
- For a Web browser, Netscape Navigator 7.1 or higher or Internet Explorer 5.5 or higher is recommended. Display may vary depending on the Web browser.

Display the Web page of this product

Display the Web page for the product to be configured.

Enter the IP address that is configured on this product in the address bar of the Web browser. Then press the ENTER key.

Example : <http://192.168.20.170/>

Configure from the Web page of this product

Click the item you wish to configure from the configuration items displayed in the Web browser. A configuration screen will be displayed in the Web browser.

Before configuring this product, user name and password are required. When the screen below is displayed, type a user name (root) and password, then click **OK**. No password is configured on factory default settings.




- Network configuration

Click **PrintServer**. Click the item you wish to configure. Select or enter a value for the appropriate item, then click **Submit**.


- Restart

Click **Restart PrintServer**. Click **Yes** for restart.

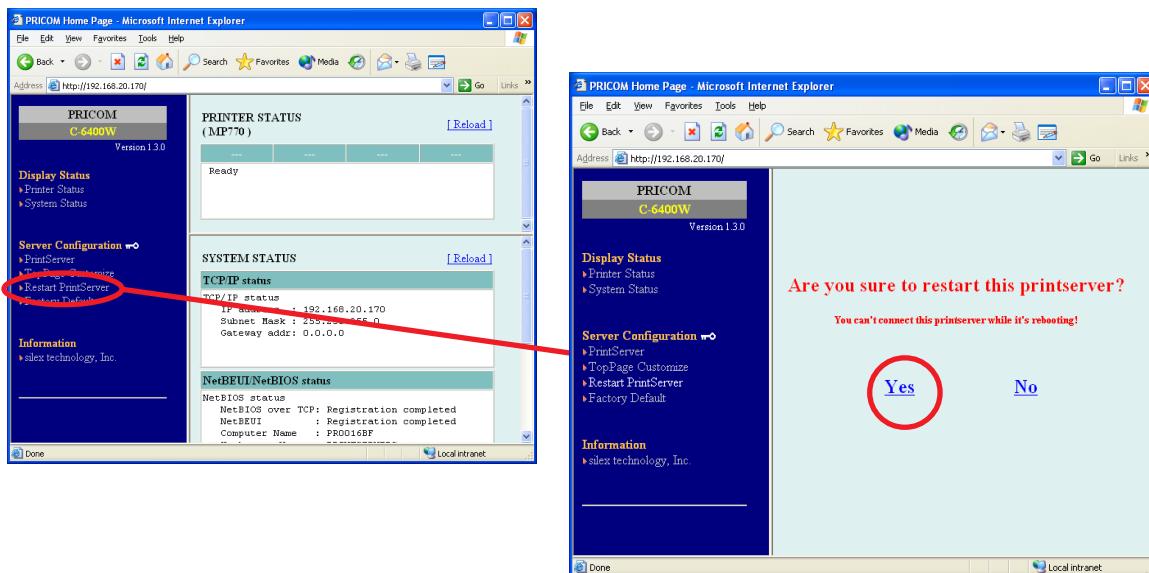

- Factory default settings

Click **Factory Default**. Click **Yes** for factory default settings.

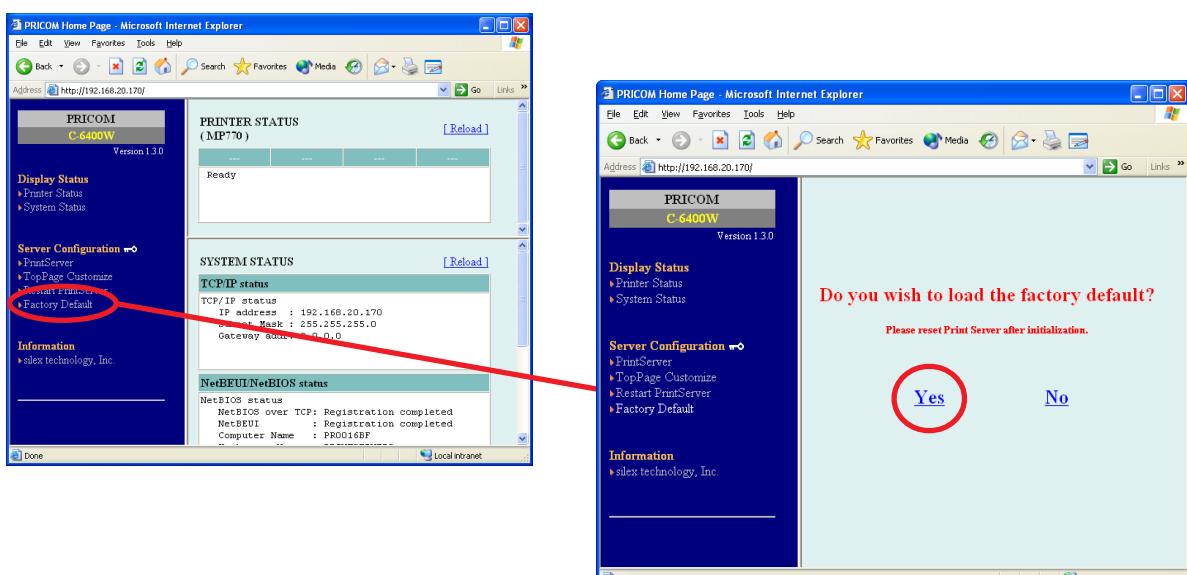

2 Configure using the Telnet

Since the Telnet protocol is loaded on this product, advanced settings for this product can be configured or changed using the Telnet that is bundled with the TCP/IP software of your PC. Useful functions including remote restart of the product and printer status monitor will be available.



- To use the Telnet, an IP address needs to be configured.
- To configure using the Telnet, you need to login as root.

Display configuration items of this product.

1. Type the login name and password to display configuration items of this product.

Login name : root
Password : (Factory Default:none)

```

PRICOM C-6400W Ver x.x.x TELNET server.
Copyright (C) 2003-2004 silex technology, Inc.
login: root
'root' user needs password to login.
password:
User 'root' logged in.

No.  Item                                Value          (level.1)
-----
 1 : Configure General
 2 : Configure TCP/IP
 3 : Configure NetBEUI/NetBIOS
 4 : Configure SNMP
 96 : Display Status
 97 : Reset Settings to Defaults
 98 : Restart Print Server
 99 : Exit
Please select(1 - 99)?

```

Number	Item	Function
1 - nn	Configuration items	
96	Display Status	Verify status
97	Reset Settings to Defaults	Restart after resetting to factory default settings
98	Restart Print Server	Restart
99	Exit	Save the changes or close without saving

Configure this product

Type a number from the configuration menu and execute.

To finish the configuration, type **99** and execute.

- Enter a configuration value

To enter a configuration value, type a number and execute (press ENTER)

```
96 : Display Status
97 : Reset Settings to Defaults
98 : Restart Print Server
99 : Exit
Please select(1 - 99)? 2

No.  Item                                Value      (level.2)
-----
1 : DHCP/BOOTP                          : DISABLE
2 : RARP                                : DISABLE
3 : IP Address                           : 192.168.20.170
4 : Subnet Mask                          : 0.0.0.0
5 : Default Gateway                     : 0.0.0.0
6 : WINS
7 : IP Filter Config
99 : Back to prior menu
Please select(1 - 99)? 3
IP Address(xxx.xxxx.xxxx.xxxx)? 192.168.20.100

Type a number and press ENTER.
Enter a value and press ENTER.
```

When the configuration is complete, type **99** and press ENTER to go back to the main menu.

- Finish the configuration

To finish the configuration, type **99** in the main menu. If you have changed the settings, a menu to select how to close is displayed. If you wish to save the changes and restart this product, type **1** (Save and Restart) and press ENTER.

```
No. Item Value (level.1)
-----
1 : Configure General
2 : Configure TCP/IP
3 : Configure NetBEUI/NetBIOS
4 : Configure SNMP
96 : Display Status
97 : Reset Settings to Defaults
98 : Restart Print Server
99 : Exit

Please select(1 - 99)? 99

Exit
1 : Save and Restart
2 : Save and Exit
3 : Exit without Saving
99 : Back to prior menu

Please select(1 - 99)?
```

Type **99** and press ENTER.
Type **1** and press ENTER.