

This manual provides complete information on how to setup and Use PRICOM. Follow the manual corresponding to your network operation to realize network printing.

Explanation on Online Manual

This manual uses the following symbols to point out specific information. These symbols provide you with additional tips.



TIP

-Information after this mark explains the important points you need to regard when operating the product. Be sure to read the explanation for safe and proper usage.



NOTE

-Information after this mark gives you additional information to help you with the setup. Refer to the explanation when you have difficulties operating the product.

About this Manual

- This manual is copyrighted by silex technology, Inc. with all rights reserved. Under the copyright laws, this manual may not be reproduced in any form, in whole or in part, without the prior written consent of silex technology, Inc.
- While every efforts has been made to ensure that the information contained in the manual is accurate and complete, no liability can be accepted for any errors or omissions. Specifications described in this manual are subject to change without prior notice.
- silex technology, Inc. makes no warranties for damage resulting from corrupted or lost data due to a mistaken operation or malfunction of the product.
- If you have any questions about this manual or our products, please contact our customer support.

- PRICOM and JC-CONNECT are registered trademarks of silex technology, Inc.
- Microsoft, MS-DOS, Windows, Windows NT are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- NetWare is registered trademark of Novell, Inc.
- Macintosh, EtherTalk, AppleTalk are trademarks of Apple Computer, Inc.
- Adobe, Acrobat, PostScript are trademarks of Adobe System Incorporation.
- ThinPrint is either a trademark or registered trademark of ThinPrint GmbH in Germany and/ or other countries.
- Other names and products not mentioned above may be registered trademarks or trademarks of their respective companies.

Safety Instruction

For safe and proper usage, please read the following information carefully.
The contents include how to handle the product and general issues for user's safety.

IMPORTANT SAFEGUARDS

Make sure to read all safety instructions carefully and to fully understand them before using our products.

This manual contains the safety instructions that must be observed to avoid potential hazards that could result in personal injuries or damages. The safety instructions have been classified according to the potential risk involved as follows.

Danger:

"Danger" indicates the existence of a hazard that could result in death or serious bodily injury if the safety instruction is not observed.

Warning:

"Warning" indicates the existence of a hazard that could result in bodily injury if the safety instruction is not observed.

Caution:

"Caution" indicates the existence of a hazard that could result in property damage if the safety instruction is not observed.

Notice:

"Notice" contains general information that relates to the safe operation of the computer.

1. PRICOM

Warning:

To avoid the risk of electric shock or possible damage, never remove the cover of PRICOM and never disassemble PRICOM. Contact the dealer of silex technology products for assistance if repair or adjustment is necessary.

2. POWER SUPPLY

Danger:

Never attempt to disassemble or repair an power supply, as exposure to electric shock hazards may result. Always contact the dealer of silex technology products if repair or replacement is required.

Warning:

Always use the power supply provided with PRICOM to avoid any risk of fire or other damage to the computer. Using an unauthorized and incompatible power supply, in violation of this warning, could result in bodily injury or property damage.

Caution:

Never bend or twist the power cord, and never pull on the power cord in an attempt to remove the plug from the socket. Never place heavy objects on the power cord, as this could result in damage to the cord. Always grasp the plug directly when unplugging the power cord to avoid causing any damage to the cord.

3. NETWORK CABLES

Danger:

Never use damaged or worn network cables. The use of damaged or worn network cables could result in electric shock, burns or fire.

4. PROPER TREATMENT OF THE DEVICE

Warning:

To avoid any risk of short-circuit, fire or other internal damage, never allow any metal objects such as screws or paper clips to fall into the device. If that should happen, immediately turn off the power and unplug the power cord. Contact the dealer of silex technology products for appropriate assistance. To avoid damage to PRICOM, never allow any liquids to spill into any part of PRICOM, and never expose PRICOM to rain or water. If any of these events should occur, turn off PRICOM immediately.

Contact the dealer of silex technology, Inc. products for assistance before attempting to use PRICOM again. To prevent computer malfunction or equipment damage, never place PRICOM on top of (or adjacent to) a heating device, and never expose it in direct sunlight. Never store PRICOM in a locked and unventilated vehicle, (where excessive internal temperatures may be encountered). Always unplug the power cord during lightning storms in order to protect the device from possible damage as a result of a power surge. If PRICOM is ever dropped and damaged, or if you ever detect the emission of an extraordinary odor or excessive heat, unplug the power cord and turn off the printer and PRICOM immediately. Contact the dealer of silex technology, Inc. products for appropriate assistance.

Notice:

If PRICOM has been exposed to cold temperature, allow it to warm to room temperature before turning on. This will prevent the occurrence of harmful condensation within the device (this is a particularly important concern when the device is being used in cold climates). Avoid using PRICOM in dusty areas since dust particles can affect the reliability of PRICOM. Contact the dealer of silex technology products if your device has become contaminated with dust or dirt particles.
