

4. Using Print JOB Accounting

This chapter explains how to use PRICOM print JOB accounting and printer management.

PRICOM Print JOB accounting is as follows.

[Print JOB Accounting]

- Function of changing print order
PRICOM can change print order (the first / the last).
- Function of changing a printer port
PRICOM can change a printer port when any printers are connected to PRICOM.
- Function of deleting a print JOB
PRICOM can delete a print JOB.

[Printer Management Function]

- Fixing an USB port
PRICOM can fix an USB port to a specific port.
- Parallel printing
PRICOM can parallel print when any same printers are connected to PRICOM.
- Setting spool operation
PRICOM can control a printing port (stop spooling / restart spooling).



NOTE

- Print JOB accounting can be used, only when the spool of the printing JOB is completely carried out to PRICOM. This function corresponds to neither JOB which printing has started, nor JOB in the process of a spool.
- Print JOB accounting can be configured only from Web browser.
- Internet Explorer 3.0 (or above) or Netscape Navigator 3.0 (or above) are recommended for Web browser.

Using Print JOB Accounting

1. Display PRICOM webpage



NOTE

- To display PRICOM webpage to be configured, follow one of the following steps.

(A) Display the webpage from AdminManager.


Select PRICOM to be configured from the AdminManager list, then click **Configuration**, then **Configuration via Web browser**.

(B) Display the webpage from Web browser.

Enter the IP address to assign for the PRICOM to the Web browser.

Example: http://192.168.20.185/

2. Display PRICOM webpage

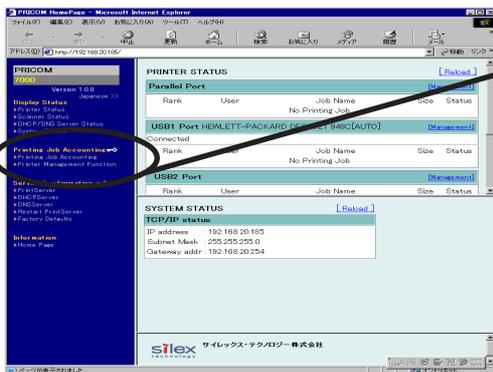

Click **Print JOB Accounting**.



NOTE


- User's name and password are shown below.

User's name: root

Password : null (not input any words)

* You can change this password, but please be noted that this will be the common password of AdminManager and TELNET.


3. Display the screen of print JOB accounting

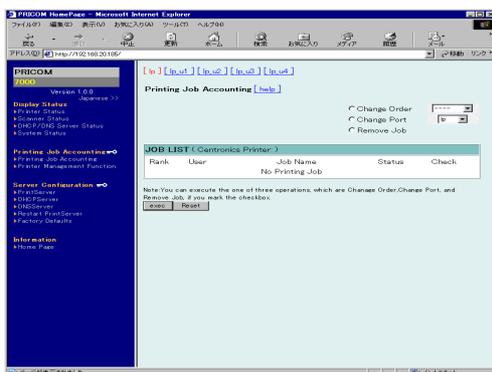

Changing Print Order

PRICOM can change print order (the first / the last).

1. Select a port to be operated, then check a print JOB which print order you want to change.
2. Check **Order**, then select **First** or **Last**, then click **Execute**.

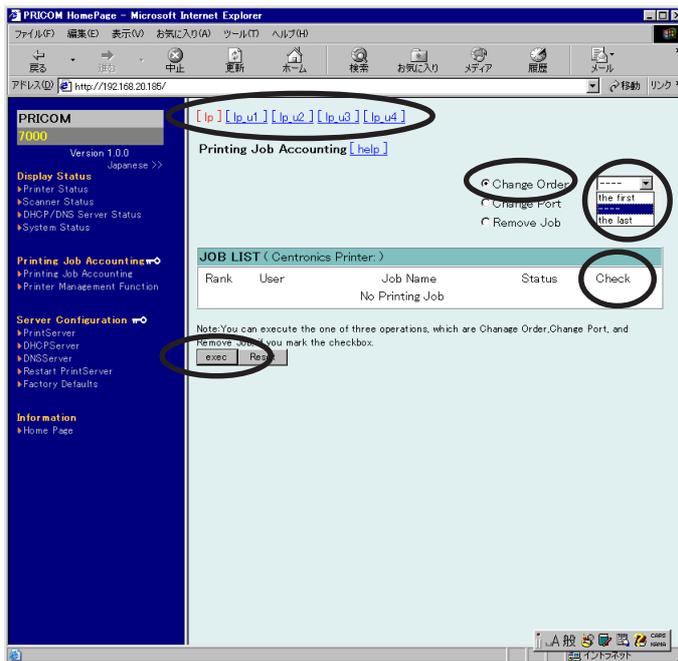


Changing a Printer port

Printer port can be changed when multiple printers are connected to PRICOM.



- PRICOM cannot perform discernment of a printer kind. In case of changing a printing port, please select the same printer or the printer used same printer driver. If select other printer, PRICOM cannot send correct printing data.

1. Select a port to be operated, then check a print JOB to change printer port.
2. Check **Change**, then select the target port, then **Execute**.

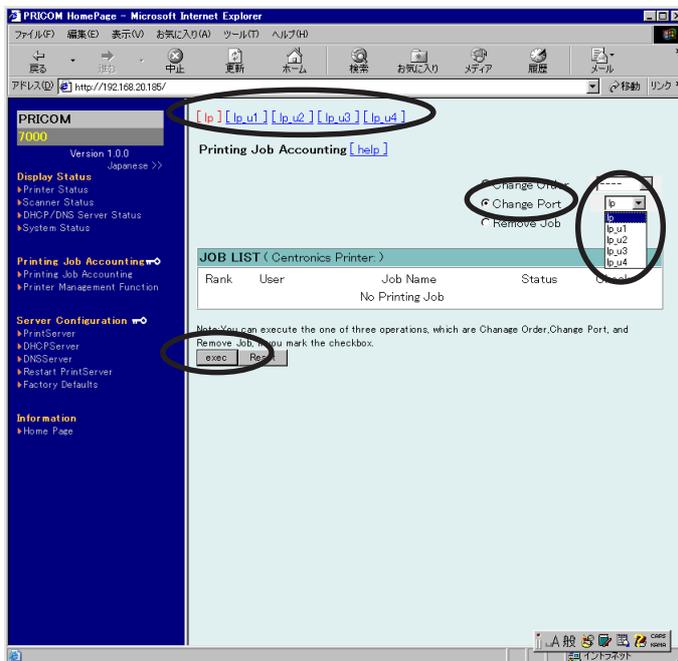

Deleting a Print JOB


PRICOM can delete a print JOB.

1. Select a port to be operated, then check the print JOB you want to delete.
2. Check **delete**, then click **Execute**.



- PRICOM can delete the print JOB under printing process to recover printing trouble.

NOTE

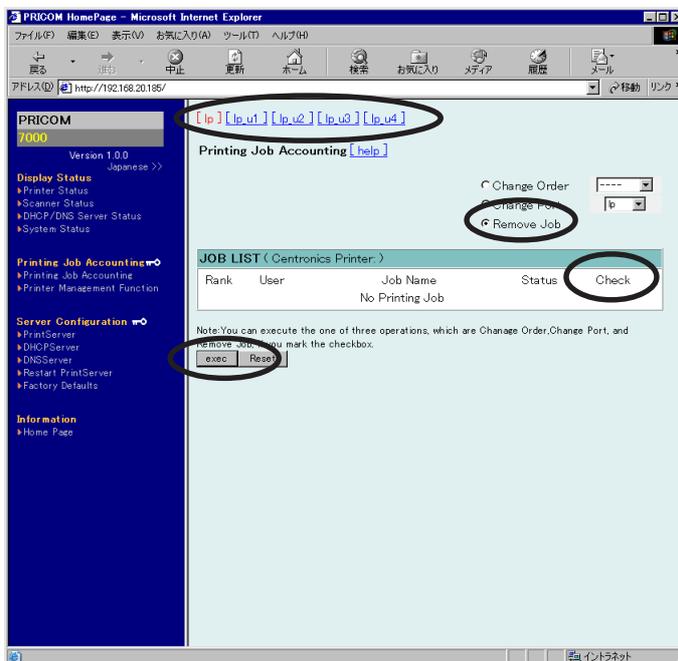

Using Printer Management

1. Display PRICOM webpage



NOTE

- To display PRICOM webpage to be configured, follow one of the following steps.

(A) Display the webpage from AdminManager.


Select PRICOM to be configured from the AdminManager list, then click **Configuration**, then **Configuration via Web browser**.

(B) Display the webpage from Web browser.

Enter the IP address to assign for the PRICOM to the Web browser.

Example: <http://192.168.20.185/>

2. Display PRICOM webpage

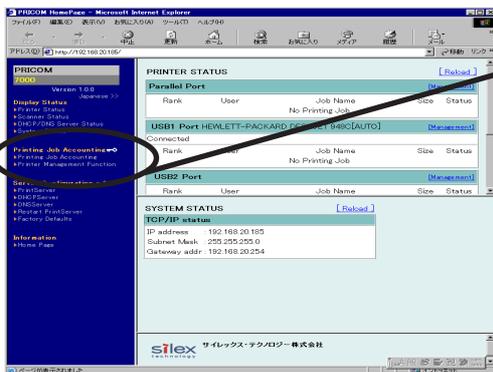

Click **Printer Management**.



NOTE


- User's name and password are shown below.

User's name: root

Password : null (not input any words)

* You can change this password, but please be noted that this will be the common password of AdminManager and TELNET.

3. Display the screen of printer management

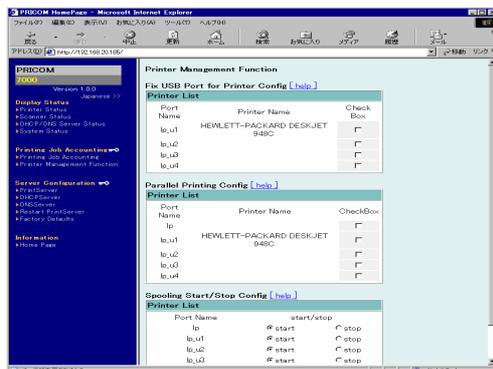

Fixing an USB Port

PRICOM can fix an USB port to a specific port.



NOTE


- In case of connecting any printers to PRICOM, PRICOM numbers at a printer port the turn which has recognized the printer.
- PRICOM can fix an USB port to a specific port.

1. Check the printer to fix, then click *Execute*.



NOTE

- Since PRICOM memorizes the information of fixed port number, even if it turns off PRICOM or restart PRICOM, PRICOM has memorized the information.

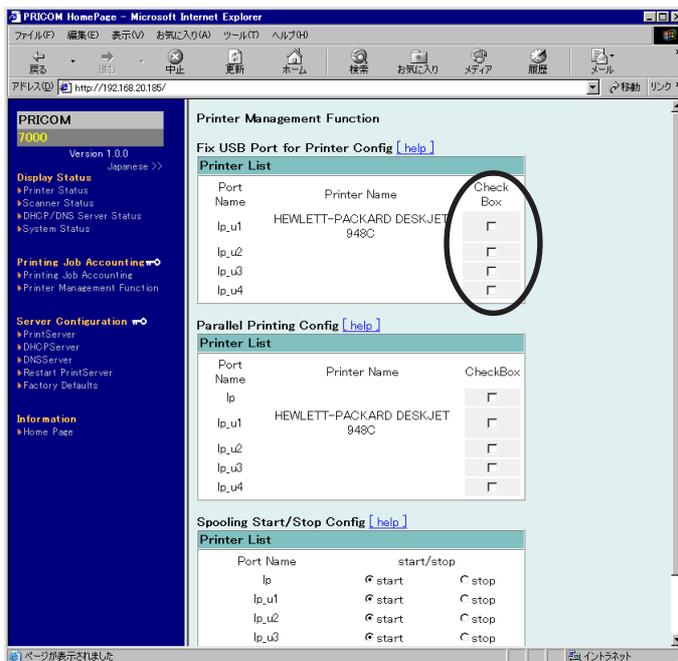

Parallel Print

You can send print data to several printers when multiple printers are connected to PRICOM.



TIP


- If you change printer port to different printer model, improper print may be executed. In case of changing printer port, please select the same printer model or the printer uses the same printer driver.

1. Select the port to print parallel print, then click **Execute**.



NOTE

- The information of parallel print configuration to be cleared when switching off/on or restart PRICOM.

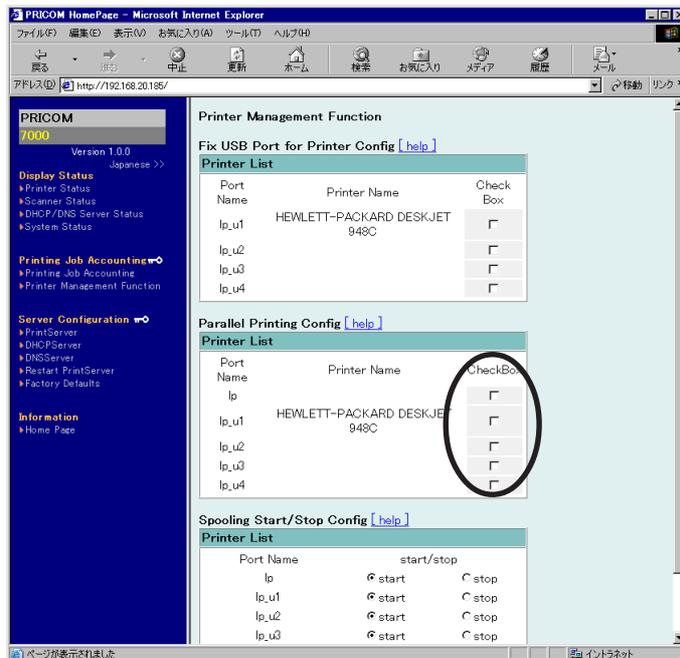

Setting Spool Operation

PRICOM can control a printing port (stop spooling / restart spooling).

1. Select the port to be configured, then click **Execute**.



NOTE

- Information of spool setting to be cleared when switching off/on or restart PRICOM.

