

Overview

Thank you for purchasing our product this time. This manual provides complete information on how to configure and use PRICOM.

This manual is edited commonly for several products and there are some parts not applied for your use.

Latest Information on this Product

Following services are available via our web site.

You can get more information at; <http://www.silex.jp/>

- Latest firmware download
- Latest configuration utility download
- Latest manual download
- Supported printers information
- FAQ information
- New products information
- Others

Installation

This chapter explains how to install PRICOM. Follow the instructions corresponding to the network environment in use to realize network printing.

Refer to the parts you need to install PRICOM.



TIP

- The following instructions may vary depending on your network environment.



NOTE

- Make sure to install printer driver to your personal computer before you start using PRICOM.

Configuration Utility



NOTE

- The below contains the explanation for PRICOM configuration. Choose an option corresponding to your network environment.

Configuration Utility	Quick Setup	Initial installation of PRICOM (Recommended)	Chapter 3-1, 3-2
	Advanced Setup	Advanced configuration for Administrators	Chapter 7
	JC-Print2002	Install Printing software and Popup status monitor	Chapter 3-1, 3-2
	PRICOM USB Utility	Install Connecting software for USB scanner	Chapter 5



NOTE

- Printing Job Management Function and DHCP/DNS server Function can be set up only from a web browser.

Installation and Configuration (For Administrators)

This contains explanation for PRICOM installation and configuration.

STEP 1	Connect PRICOM to printer	Chapter 1
STEP 2	Use PRICOM in Windows 95/98/Me	Chapter 3-1
	Use PRICOM in Windows NT 4.0, Windows 2000, Windows XP	Chapter 3-2
	Use PRICOM in UNIX/Linux	Chapter 3-3
STEP 3	Test print (self-diagnostic report) and verify the configuration	Chapter 1

Configuration (For Clients)

The contains explanation for PRICOM configuration.

STEP 1	Use PRICOM in Windows 95/98/Me	Chapter 3-1
	Use PRICOM in Windows NT 4.0, Windows 2000, Windows XP	Chapter 3-2
	Use PRICOM in UNIX/Linux	Chapter 3-3
STEP 2	Test print (self-diagnostic report) and verify the configuration	Chapter 1

Configuration for Additional Function

This contains explanation for PRICOM configuration for additional function.

Print Job Accounting Function

STEP 1	Use Print JOB Accounting	Chapter 4
---------------	--------------------------	------------------

Scanner server Function

STEP1	Connect PRICOM to USB scanner	Chapter 1
STEP 2	Use PRICOM in Windows 2000, Windows XP	Chapter 5

DHCP/DNS server Function

STEP 1	Use DHCP/DNS server function	Chapter 6
---------------	------------------------------	------------------

Popup status monitor Function

STEP 1	Use PRICOM Monitor SX	Chapter 8
---------------	-----------------------	------------------

Advanced Configuration for Administrators

This contains explanation for PRICOM advanced configuration.

Function for Configuration	Configuration using AdminManager	Chapter 7
	Configuration via Web browser	
	Configuration using TELNET	